

red shield

protection plans

guard

vehicle protection plans

Premier Plus

Premium Plus

Powertrain Enhanced

Powertrain Plus

Powertrain

engine

Pistons, Piston Rings, Crankshaft, and Main Bearings, Connecting Rods and Rod Bearings, Camshaft and Camshaft Bearings, Timing Chain, Timing Gears, Intake and Exhaust Valves, Valve Springs, Oil Pump, Push Rods, Rocker Arms, Hydraulic Lifters, Rocker Arm Shafts, Water Pump. Engine block and/or cylinder heads.

transmission / transaxle

All internally lubricated parts of Manual or Automatic Transmissions, including oil pump, oil drums, planetaries, sun gear and shell, shafts, bearings, side gears, carrier pinion gear, ring gear, shaft rail, forks, synchronizers, and Torque Converters

transfer case

All internally lubricated parts of the 4 x 4 Transfer Case.

drive axels

All internally lubricated parts. Drive Axle housing is also covered if damaged is caused by a breakdown of an internally lubricated part.

turbo / supercharger (factory only)

All internally lubricated parts of the factory installed turbo/supercharger.

air conditioning / heating system

Condenser, compressor, and evaporator (All plans except Powertrain). Compressor clutch and pulley, conditioning lines and hoses, evaporator, idler pulley and idler pulley bearing, high/low compressor cut-off switch, accumulator, drier, expansion valve, temperature control programmer, heater core, blower motor, high/low cut off switch, expansion valve, and pressure cycling switch

suspension

Upper and Lower Control Arms; Control Arm Shafts and Bearings or Bushings; Upper and Lower Ball Joints; Radius Arm and Bushings; Torsion Bars, Mounts and Bushings; Stabilizer Bar, Links and Bushings; Struts; Strut Bearing Plates; Spindle and Spindle Support; Wheel Bearings; Panhard Bar; Track Bar; Suspension Bumpers; Leaf Springs; Leaf Spring Shackles and Hardware; Load Assist Shocks; Shocks; Load Assist Springs; and Coil Springs. Variable Dampening Suspension; Compressor; Control Module; Dampening Actuator; Solenoid; Struts; Height Sensor; and Mode Selector Switch

steering

All Internally Lubricated Parts contained within the Steering Box; Rack and Pinion Gear; Power Steering Pump; Power Steering Hoses; Steering Knuckles; Pitman Arm; Idler Arm; Tie Rod Ends and Drag Link; Steering Damper; Upper and Lower Steering Column Shafts; and Couplings, including Internal Tilt-Wheel Mechanism; Steering Box and Rack and Pinion Gear Housings; Power Steering Assist Cylinder; Power Steering Pump Cooler; Twin "I" Beam & Bushings; and Steering Travel Stop. Rear Wheel Steering: Rear Steering Shaft and Couplings; Power Cylinder and Pump; Electronic Control Unit/Solenoid; Phase Control Unit; Stepper Motor; Steering Box; Control Valve; Rack; and Tie Rod Ends.

cooling system

Water Pump, Cooling Fan; Cooling Fan motors; and fan clutch (All plans except Powertrain Plus and Powertrain). Engine Cooling Fan and Motor; Fan Clutch; Belt Tensioner; Radiator; Heater Core; Thermostat; Blower Motor; Hot Water Valve; Engine Oil Cooler; Cooler Lines and Fittings

fuel system

Fuel System: Fuel Pump; fuel injection pump; metal fuel lines; fuel pressure regulator; fuel sending unit; and fuel gauge (All plans except Powertrain Plus and Powertrain). Fuel Injection Pump and Injectors; Vacuum Pump; Fuel Tank; Fuel Tank Sending Unit; Metal Fuel Delivery Lines; Fuel Pressure Regulator; and Fuel Tank Switching Unit/Switch

electrical

Alternator, voltage regulator, heater fan, starter motor, starter solenoid, and starter drive.

enhanced electrical

Power window motors and regulator; power door lock actuators; power truck switch; and power antenna motor (All plans except Powertrain Plus and Powertrain). Numerous other electrical components covered with Premier Plus and Premium Plus Plans

brake system

Master Cylinder; Power Brake Cylinder; Vacuum/Hydro Assist Booster; Disc Brake Caliper; Wheel Cylinders; Compensating Valve; Brake Hydraulic Lines and Fittings; Hydraulic Control Unit; Hydraulic Trailer Brake Assembly and its Components. The following ABS Parts are also covered: Electronic Control Processor; Wheel Speed Sensors; Hydraulic Pump/Motor Assembly; Pressure Modulator Valve/Isolation Dump Valve; and Accumulator.

seals and gaskets

Leaking seals and gaskets on any covered part listed above

exclusionary

An exclusionary plan is written so that the plan states everything is covered but a small list of excluded items



The Premier Plus and Premium Plus Plans automatically become Powertrain Plus once your vehicle reaches 100,000 miles on its odometer.

Benefits & Features

Emergency Roadside Assistance -

We pay for the cost of emergency roadside services, including:

- o Towing
- o Battery Jumpstarts
- o Flat Tire Changes
- o Fuel Delivery (You are responsible for fuel costs)
- o Lockout Assistance



A+ RATING



Rental Car Coverage

We pay for the expense of a rental car when your vehicle is being repaired for covered repairs.

Trip Interruption Benefits

In the event you experience a breakdown 100 miles away from your home, we will pay for a portion of your meals and lodging for covered repairs.

Nationwide Protection

All of our plans can be used nationwide, so if you are traveling and experience a breakdown, you can rest assured your plan will be accepted.

Transferable Coverage

If you sell your car, you can transfer the coverage to the new owner, which increases the value of your vehicle!